

Box contents

- KS Fresh clock radio dock
- Mains adaptor
- User manual

Functions


1. Play and charge iPhone5/Touch5/Nano7
2. FM radio: save up to 10 stations
3. Dual alarm clock radio
4. Wake to iPod/iPhone/FM/Buzzer
5. Bright LED display

Keys and controls

- **STANDBY** Press and hold to enter standby mode or press once to switch between iPod/radio/aux-in modes
- **VOL-** Volume down/Alarm 1
- **VOL+** Volume up/Alarm 2
- **◀◀** Previous track/down
- **▶▶** Play/pause
- **▶▶** Next track/up
- **SNOOZE** When alarm rings, press to snooze



- ON/OFF switch button
- DC IN socket
- AUX IN socket

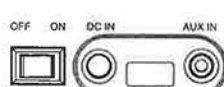

Turning the Fresh on

1. First, make sure the mains adaptor is connected and that the main power switch on the rear of the unit is in the 'ON' position.
2. Press the STANDBY button to turn the unit on. The screen will now be illuminated. Wait two seconds for the unit to boot up.
3. While the unit is turned on, press the STANDBY button to scroll through the various audio input modes, which are: iPod, FM radio and auxiliary audio (AUX).
4. If you press and hold STANDBY again, the unit will turn off and the screen will become dim, entering standby mode.

Setting the clock

1. Simply press the drawer on the front of the unit to eject it and dock your iPod/iPhone or alternatively: With the Fresh in standby mode, press and hold the ▶▶ button to set the time and choose between the 12 or 24 hour formats by pressing the ◀◀ or ▶▶ button. Press ▶▶ to confirm. The hour digit will then be flashing.
2. Press the ▶▶ or ◀◀ button to increase or decrease the hours and press the ▶▶ button to confirm your setting. The minute digits will now be flashing. Press the ◀◀ or ▶▶ button to decrease or increase the minutes and press ▶▶ to save the time.
Note: There may be up to 59 seconds time difference between your iPod/iPhone and the Fresh.

Setting alarm 1

1. Put the Fresh into standby mode.
2. Press and hold the VOL- button. The alarm 1 icon will show up and the hour digit will be flashing. Press the ▶▶ or ◀◀ button to change the hours, followed by VOL- to confirm.
3. Press the ▶▶ or ◀◀ button to change the minutes, followed by VOL- to confirm.
4. The alarm 1 icon will then flash. Press the ▶▶ or ◀◀ button to select between buzzer, FM or iPod to wake you up, followed by VOL- to confirm.
Note: If the alarm sound is set to iPod and there is no iPod or iPhone connected, the alarm sound will automatically switch to buzzer. In order to wake to your iPod or iPhone, it must be connected. If it is in play mode, no alarm will sound. If your iPod or iPhone has less than one hour of songs, put it in repeat mode.
5. The alarm is now set.

Setting alarm 2

1. Put the Fresh into standby mode.
2. Press and hold the VOL+ button. The alarm 2 icon will show up and the hour digit will be flashing. Press the ▶▶ or ◀◀ button to change the hours, followed by VOL+ to confirm.
3. Press the ▶▶ or ◀◀ to change the minutes, followed by VOL+ to confirm.
4. The alarm 2 icon will then flash. Press the ▶▶ or ◀◀ button to select between buzzer, FM or iPod to wake you up, followed by VOL+ to confirm.
Note: If the alarm sound is set to iPod and there is no iPod or iPhone connected, the alarm sound will automatically switch to buzzer. In order to wake to your iPod or iPhone, it must be connected and powered off. If it is in play mode, no alarm will sound. If your iPod or iPhone has less than one hour of songs, put it in repeat mode.
5. The alarm is now set.

Snoozing

Press the SNOOZE button. The alarm will then go off and will resume again in nine minutes.
Note: The alarm will repeat every day until it is reset.

Turning off the alarm

Press the STANDBY button.

Cancelling the alarm(s) you have set

With the Fresh in standby mode, press the VOL-/VOL+ button once until the alarm icon stops showing on the LED display.

Playing your music

1. To listen to music, dock your iPod or iPhone, turn the Fresh on and select iPod mode. Your music will start playing automatically.
2. To pause your music, press the ▶▶ button. To resume playback, press it again.
3. To go to the next or previous track, use the ◀◀ or ▶▶ button. To search the current track using fast forward or rewind, press and hold ◀◀ or ▶▶ while the track is playing.
4. To adjust the volume, press the VOL+ or VOL- button.
Note: When you connect your iPod or iPhone, the time will be synchronized automatically.

Connect other audio devices

By using the aux-in jack located at the rear of the Fresh, you can listen to other audio players too.

1. Insert the plug of a 3.5 mm audio cable into the HEADPHONE or LINE-OUT socket on your audio device, then insert the other end of the cable into the aux-in socket on the Fresh.
2. To put the Fresh into aux mode, press the STANDBY button until the aux icon appears on the display.
3. Turn your device on and press play.

Listen to the radio

For the best FM radio clarity, fully extend the wire antenna which is located at the rear of the Fresh. It is important not to alter, obstruct or attach other antennas to this wire antenna.

1. To turn the radio on, press the STANDBY button until FM appears on the LED screen.
2. To tune in a desired station manually, press the ▶▶ or ◀◀ button to search.
3. To tune in a desired station using auto scan, press and hold the ▶▶ or ◀◀ button.
4. To save the station to a channel preset, press and hold the ▶▶ button until the letters 'ch' with a number next to them flash on the screen. Then press the ▶▶ or ◀◀ button to select a channel from 1 to 10. Press the ▶▶ button to confirm.
5. To listen to a preset station when in radio mode, press the ▶▶ button. The display will show the letters 'ch' with a number next to them. Then press the ▶▶ or ◀◀ button to select a channel from 1 to 10. Press the ▶▶ button to confirm.

Sleep

1. To enter into sleep mode, press the SNOOZE button on the top of the Fresh while listening to your iPod/iPhone or the radio.
2. Cycle through to choose from 10 minutes to 90 minutes.
3. The unit will automatically turn off after the selected time.
4. To adjust the sleep time, press SNOOZE again and choose from 10 to 90 minutes.
5. To cancel the sleep time, press SNOOZE repeatedly until '00' flashes on the display.
6. To stop listening at any time, press and hold the STANDBY button.

Care for your Fresh

Please DON'T

- Get the Fresh wet
- Drop the Fresh as this will invalidate your warranty
- Open up the Fresh. There are no user serviceable parts inside
- Use any other mains adaptor than the one supplied
- Expose the Fresh to extreme temperatures or rapid changes of hot to cold or vice versa

Please DO

- Clean the Fresh with a soft dry cloth and no detergents