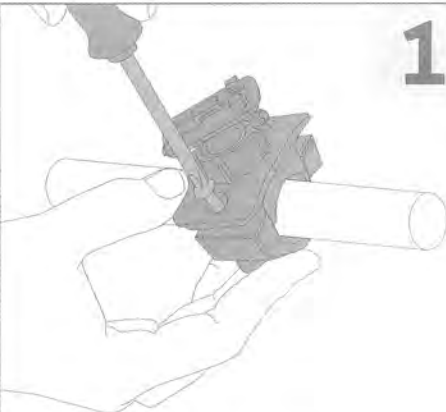
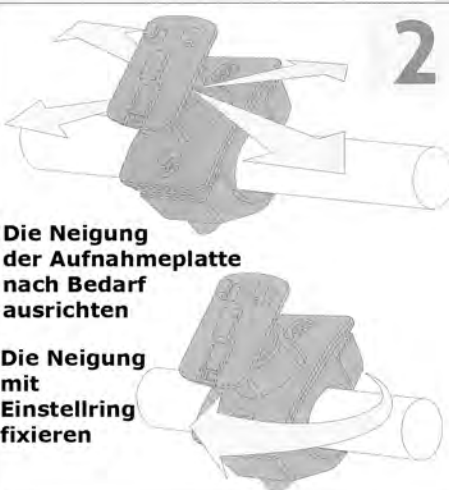


1

**Lenkradhalterung am
Rundrohrlenker anschrauben**

2

**Die Neigung
der Aufnahmeplatte
nach Bedarf
ausrichten**

**Die Neigung
mit
Einstellring
fixieren**

3

**Silikon-Unterlage in
die Schale einsetzen**

4

Apertura laterale per passaggio cavo.
Side cut to fit charging cable.




Passacavo per
Grommet for
USB 3.0



Passacavo per
Grommet for
APPLE

**Passende Schutzhülle
für Lade- oder Daten-Kabel
wählen**

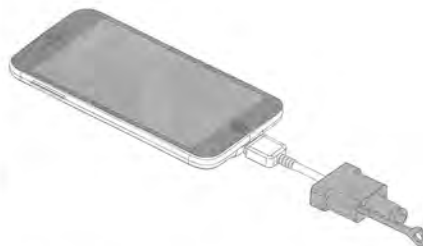5


**Lade- oder Daten-Kabel
ins Smartphone einstecken
und Schutzhülle einziehen**

6

**Smartphone mit Kabel
in die Schale einsetzen**



Die Befestigungshacken nach unten ziehen

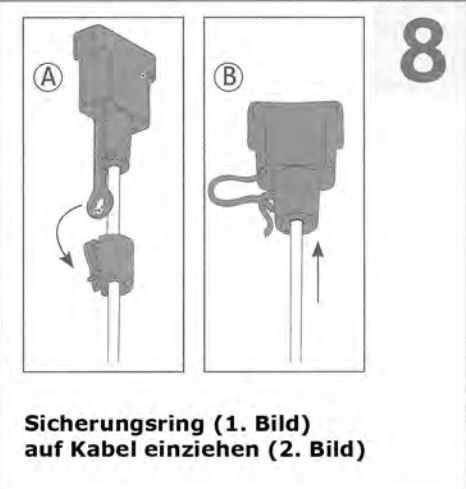

Sicherungsring (1. Bild) auf Kabel einziehen (2. Bild)



Schutzkappe benutzen, wenn kein Kabel angeschlossen



Die Schale auf der Aufnahmeplatte fest einsetzen bis man den „Klick“ vom Einrasten hört. Prüfen, ob die Schale fest auf der Aufnahmeplatte sitzt. Die Schale darf sich nicht leicht aus der Halterung gelöst werden. Sie muss fest sitzen!

Tutti i marchi, i nomi e i modelli di telefono cellulare sono di proprietà dei rispettivi titolari.
All trademarks, names and mobile phone models are the property of the respective companies.

★ ★ ★ ★ ★
 COMPATIBILITY
 AND QUALITY
 GUARANTEED BY
 CELLULAR ITALIA S.p.A.
 www.cellularline.com/quality

COMPANY WITH QUALITY MANAGEMENT
 SYSTEM CERTIFIED BY DNV
 = ISO 9001:2008 =


CELLULAR ITALIA S.p.A.

Distribuito da: / Distributed by: CELLULAR ITALIA S.p.A.
 via Lambrakis 1/A - 42122 Reggio Emilia - Italy
 www.interphone.com
 info.interphone@cellularline.com
 www.cellularline.com

ISTRSMIPROCASE