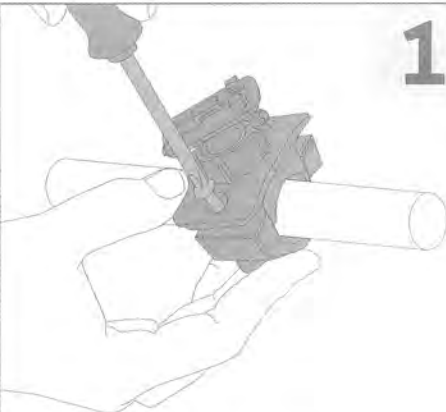
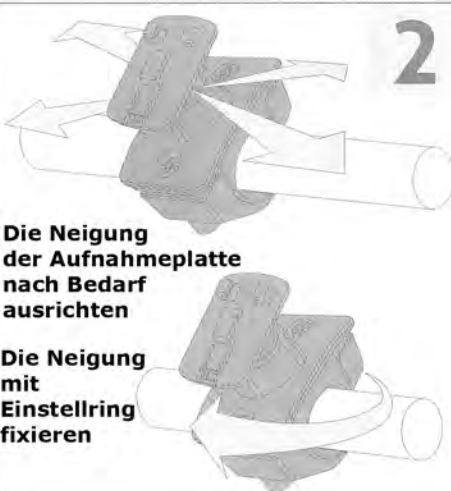


1

Lenkraldhalterung am Rundrohrlenker anschrauben

2

Die Neigung der Aufnahmeplatte nach Bedarf ausrichten

Die Neigung mit Einstellring fixieren

3

Silikon-Unterlage in die Schale einsetzen

4

Apertura laterale per passaggio cavo.
Side cut to fit charging cable.




Passacavo per Grommet for USB 3.0



Passacavo per Grommet for APPLE

Passende Schutzhülle für Lade- oder Daten-Kabel wählen

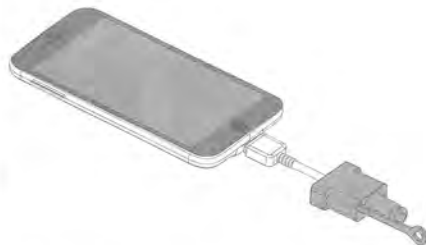5

Lade- oder Daten-Kabel ins Smartphone einstecken und Schutzhülle einziehen

6

Smartphone mit Kabel in die Schale einsetzen



Die Befestigungshacken nach unten ziehen



Sicherungsring (1. Bild) auf Kabel einziehen (2. Bild)



Schutzkappe benutzen, wenn kein Kabel angeschlossen



Die Schale auf der Aufnahmeplatte fest einsetzen bis man den „Klick“ vom Einrasten hört. Prüfen, ob die Schale fest auf der Aufnahmeplatte sitzt. Die Schale darf sich nicht leicht aus der Halterung gelöst werden. Sie muss fest sitzen!

Tutti i marchi, i nomi e i modelli di telefono cellulare sono di proprietà dei rispettivi titolari.
All trademarks, names and mobile phone models are the property of the respective companies.

★ ★ ★ ★ ★
 COMPATIBILITY
 AND QUALITY
 GUARANTEED BY
 CELLULAR ITALIA S.p.A.
 www.cellularline.com/quality

COMPANY WITH QUALITY MANAGEMENT
 SYSTEM CERTIFIED BY DNV
 = ISO 9001:2008 =


CELLULAR ITALIA S.p.A.

Distribuito da: / Distributed by: CELLULAR ITALIA S.p.A.
 via Lambrakis 1/A - 42122 Reggio Emilia - Italy
 www.interphone.com
 info.interphone@cellularline.com
 www.cellularline.com

ISTRSMIPROCASE